

AUDIO-VIDEO DISPLAY AND CONTROL UNIT

General Functions

- 71 ON** button
- 72** CD compartment of the CCD
- 73 CD eject** button (drive of the CCD)
- 74 AM** button
- 75 TA** button
Short press: Activate/deactivate traffic announcement priority; cancel a playing traffic announcement
Long press: Start the Travelstore function
- 76** **End a Call** button
- 77 Station** buttons **1 - 6**
Short press: Select a stored station
Long press: Store a station
- 78 FM** button
- 79 SCRL** button
Display the contents of the display as scrolling text
- 80** Short press: Answer or place a call
Long press: Open the phone book
- 81** DVD/CD compartment of the CCS
- 82 DVD/CD eject** button (drive of the CCS)
- 83 Remote** buttons
- 84 ENTER** button
Confirmation function in navigation, video, DVD and TV mode
- 85 MENU** button
Open the main menu to configure the device's main functions
- 86** **Return** button
Close menus

- 87 NAVI** button
Activate the control of a connected navigation system using: - **Remote** buttons **83** - **ENTER** button **84** in the same way as the remote control of the navigation system

- 88 CAM** button
Select a camera image on the driver's monitor

- 89 MON** button
Activate, deactivate and/or synchronise the monitors in the cabin

- 90 MAP** button
Display the navigation map display in the cabin (only when a Coach Navigation unit is connected in conjunction with a suitable driver's monitor)

Driver's Controls

- 91** Left control knob for the cockpit
Turn: Adjust the volume and the menu selection
Press: Open and confirm menu items
- 92 RADIO** Select the radio audio source
- 93 VIDEO** Select the video source (drive of the CCS and external video sources)
- 94 CD** Select the CD audio source (drive of the CCD)
- 95 AUX** Select the USB and AUX audio sources


Passenger's Controls

- 96** Right control knob for the cabin
Turn: Adjust the volume and the menu selection
Press: Open and confirm menu items
- 97 RADIO** Select the radio audio source
- 98 VIDEO** Select the video source (drive of the CCS and external video sources)
- 99 CD** Select the CD audio source (drive of the CCD)
- 100 AUX** Select the USB and AUX audio sources

- Prevost Service Centers
- Prevost Parts Customer Service
- Prevost Service Providers

North America's eleven Prevost-owned Parts and Service Centers and 165+ Prevost Service Providers provide maintenance and warranty service for Volvo D13 engines along with other vehicle systems and maintenance.

For a complete list of Prevost Service Centers and Service Providers, please visit www.prevostcar.com

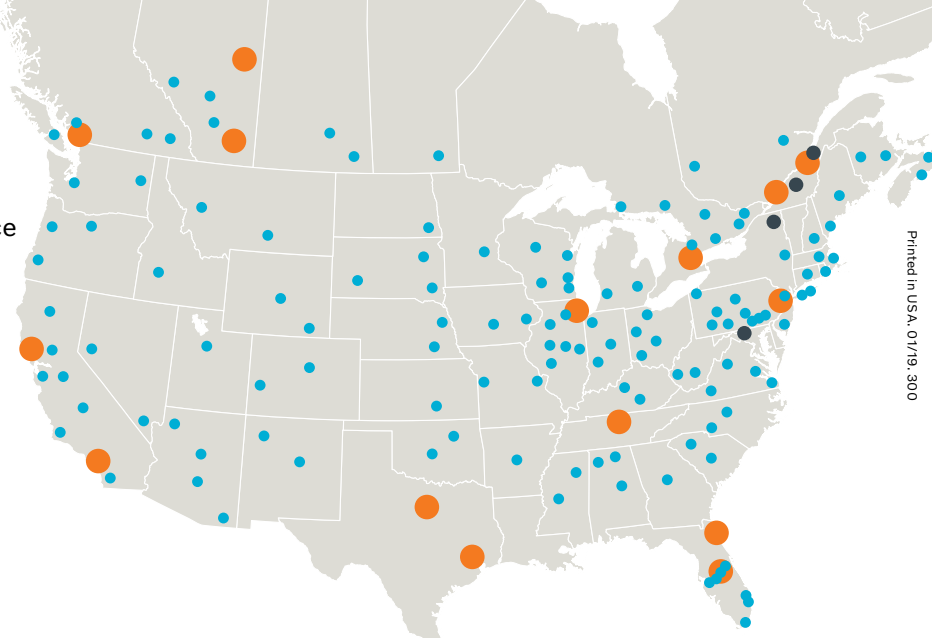

PREVOST PARTS AND SERVICE CENTERS

CALIFORNIA - BAY AREA
6821 Central Avenue
Newark, CA 94560
Tel: 1-310-283-1852

CALIFORNIA - SOUTHERN
3384 De Forest Circle
Mira Loma, CA 91752
Tel: 1-800-421-9958
Fax: 1-951-360-2560

FLORIDA - JACKSONVILLE
6931 Business Park Blvd. North
Jacksonville, FL 32256
Tel: 1-800-874-7740
Fax: 1-904-886-0092

FLORIDA - ORLANDO
1300 Green Forest Court
Winter Garden, FL 34787
Tel: 1-407-554-0196

ILLINOIS
2715 N. Carnation Street
Franklin Park, IL 60131
Tel: 1-847-778-7475

NEW JERSEY
201 South Avenue
South Plainfield, NJ 07080
Tel: 1-800-223-0830
Fax: 1-908-222-7304

TENNESSEE
800 South Cartwright Street
(Garmin GPS — 799 S. Cartwright Street)
Goodlettsville, TN 37072
Tel: 1-877-299-8881
Fax: 1-615-299-8816

TEXAS - FORT WORTH
15200 Frye Road
Fort Worth, TX 76155
Tel: 1-866-773-8678
Fax: 1-817-685-0460

TEXAS - HOUSTON
11851 Cutton Road
Houston, TX 77066
Tel: 1-877-602-0274
Fax: 1-281-315-1571

ALBERTA - CALAGRY
2932 Kingsview Blvd. SE
Airdrie, Alberta T4A 0C9
Tel: 1-403-519-3477

ALBERTA - FT. MCMURRAY
292 MacDonald Crescent
Fort McMurray, Alberta T9H 4B6
Tel: 1-780-713-0274
Fax: 1-780-743-0983

BRITISH COLUMBIA
11911 NO. 5 Road
Richmond, BC V7A 4E9
Tel: 1-604-940-3306
Fax: 1-604-940-3384

ONTARIO
7655 Tranmere Drive
Mississauga, Ontario L5S 1L4
Tel: 1-905-738-0881
Fax: 1-905-738-0891

QUEBEC - LÉVIS
850, Chemin Olivier
Lévis, Quebec G7A 2N1
Tel: 1-866-870-2046
Fax: 1-418-831-7432

QUEBEC - MONTREAL
435, Rue Norman
Lachine, Quebec H8R 1A4
Tel: 1-514-687-6741

PARTS CUSTOMER SERVICE
ILLINOIS
2250 Point Blvd., Suite 410
Elgin, IL 60123
Eastern Region: 1-877-279-1224
Central Region: 1-877-279-1245
Western Region: 1-877-279-1219
Fax: 1-877-999-8809

QUEBEC
2955-A Watt Street
Quebec City, Quebec G1X 3W1
Tel: 1-800-463-8876
Fax: 1-800-939-0133

FOR SALES INFORMATION
USA 1-877-773-8678
CANADA 1-418-883-3391
Prevost, 35 Gagnon Blvd.
Sainte-Claire, Quebec G0R 2V0
Canada
www.prevostcar.com

VOLVO

Volvo Buses. Driving quality of life



VOLVO 9700

Driver's Guide



WHEELCHAIR LIFT REMOTE

- 66 POWER ENABLE SWITCH**
Provides power to the pendant and thereby enables the lift.
- 67 DEPLOY**
Platform moves outward from lift compartment.
- 68 STOW**
Platform moves downward toward stow level and then retracts into lift compartment. If platform is below stow level, it must first be raised above stow level.
- 69 DOWN**
Platform lowers toward ground level. Bridgeplate automatically rises when platform drops below floor level.
- 70 UP**
Platform rises toward vehicle floor level. Bridgeplate automatically lowers when platform arrives at floor level.



OPERATING THE WHEELCHAIR LIFT

Deploy Platform

Press and hold **DEPLOY** button until platform is completely extended from lift compartment. *NOTE: Platform cannot be moved up or down unless platform is fully extended.*

Unlatch each handrail by pushing downward and then swinging outward by hand.

Pull out on top edge of platform to release magnetic latch and lower platform sections to horizontal position; weight of platform is spring assisted.

Unfold front platform section by grasping handle provided.

Raise front rollstop to upright position and lock in place by allowing it to drop into the slots at rollstop pivot points.

Lower Platform

Press and hold **DOWN** button until platform contacts ground. Verify that bridgeplate is in upright position.

Lift front rollstop out of slots and swing forward until it rests on ground.

Carefully place wheelchair in center of platform, preferably facing outward (away from vehicle), and lock wheelchair brakes. Pull safety belt from retractor on handrail and fasten to other handrail.

Raise front rollstop to upright position and lock in place by allowing it to drop into the slots at rollstop pivot points.

Raise Platform

Press and hold **UP** button until platform rises and stops automatically at vehicle floor level. Verify that bridgeplate lowers to horizontal position and rests flat on vehicle floor.

Release wheelchair brakes, and carefully board passenger into vehicle.





DASH BOARD CONTROLS

Mirror

- 1 Mirror heater
- 2 Rear-view mirror adjustment

Lightings

- 3 Parking brake
- 4 Lighting panel
- 27 Night lighting
- 28 Passenger's reading lights
- 29 Passenger's area lighting
- 30 Under seats night lighting
- 42 Position light
- 56 Exterior lights (option)

Suspension

- 5 Tire Pressure Monitoring System
- 6 Kneeling
- 7 Tag axle¹
- 9 Bus level control
- 10 Hill start assist
- 11 Traction control system
- 59 Bus speed level down

Gauges

- 12 Turbo boost pressure
- 13 Tachometer
- 14 Engine coolant temperature
- 16 DEF (Diesel Exhaust Fluid) Level

Climate

- 17 DID (driver information display)
- 18 Speedometer
- 19 Front brake system air pressure
- 20 Fuel level
- 21 Rear brake system air pressure
- 35 Emergency window indicator light

Audio/Video

- 15 Driver's microphone enable
- 36 Audio-video control unit
- 37 Audio-video display unit

Climate

- 23 Temperature control, driver's area²
- 24 Air flow selector
- 25 Fan speed
- 26 Temperature control, passenger's area²
- 44 Driver's fan
- 46 Auxiliary heater display (option)

Doors

- 31 Exterior door switch activation
- 41 Entrance door opening
- 57 Middle door (option)
- 58 Luggage door (option)

Other Controls

- 8 30 Power Source³
- 22 Automatic Fire Suppression System
- 33 Front sun visor
- 34 Delay Automatic Fire Suppression System
- 43 Central locking
- 60 Middle door reset

Wheelchair Lift

- 38 Wheelchair lift system enable indicator light (option)
- 39 Wheelchair lift door ajar indicator light (option)
- 40 Wheelchair lift system main switch (option)

Other Controls

- 45 Lavatory activation
- 47 Menu
- 48 Program selection button
- 49 Unit start-up button
- 50 Button to reduce the value of the selected parameter
- 51 Button to increase the value of the selected parameter
- 52 Rear Parking Sensor Monitor (option)
- 53 Destination Sign (option)
- 54 Battery Charger located outside (option)
- 55 USB Outlet
- I-SHIFT (see I-Shift section on right)

1 For Towing: Disconnect the drive axle from the transmission. **IMPORTANT: DO NOT** release parking brake unless foot brake is engaged.

2 To get full AC with the door open: (applies to fast idle option)

- Engage parking brake.
- Put gearshift in neutral.
- Door brake indicator on dashboard is then disengaged.

3 Ignition: To use I-Start features **I + click**

AUXILIARY HEATER PANEL (OPTION) (sits behind the dash drawer)



55 USB OUTLET (inside of compartment)

STEERING WHEEL WANDS

- 52 Idling speed adjust/ cruise set speed
- 53 Cruise control activation
- 54 Headlight beam toggle, turn signal
- 55 Volvo engine brake/retarder
- 56 Cruise Brake
- 57 Windshield wipers and washers control
- 58 **ESCAPE** button, DID menu
- 59 **ENTER** button, DID menu
- 60 **UP/DOWN** button, DID menu



LEFT STEERING WAND


RIGHT STEERING WAND

I-SHIFT SELECTOR PAD

- 61 Selected gear display
- 62 Manual gear selector UP/DOWN
- 63 Reverse
- 64 Economy/Performance mode
- 65 Neutral
- 66 Automatic Drive Mode
- 67 Manual Drive Mode (Use + and - Shift buttons)



DRIVER SEAT BUTTONS

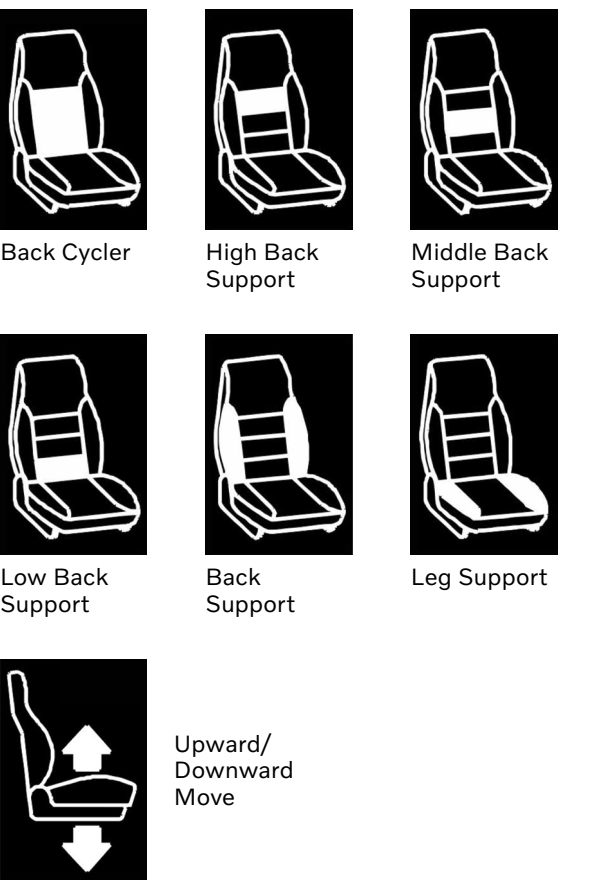

Never release the park brake without the footbrake engaged!
 ¡Nunca libere el freno de estacionamiento sin que el pedal de freno este presionado!
 Ne jamais relâcher le frein de stationnement à moins que la pédale de frein ne soit enfoncée!
VOLVO 21511437

DETAIL OF STICKER



DRIVER SEAT BUTTONS (see details on right panel)

